



STEP 1

ARRANGE HAY HALES OVER GEOTEXTILE
FABRIC ON LEVEL LAND TIGHTLY PACKED
AS SHOWN TO COVER AN AREA
APPROXIMATELY 12' x 12'.

STEP 3 INSTALL SEDIMENT BARRIER, IF REQUIRED BY COMPANY REPRESENTATIVE, AROUND ENTIRE HAY BALE STRUCTURE AS SHOWN.

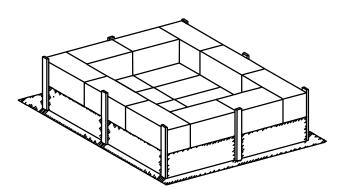

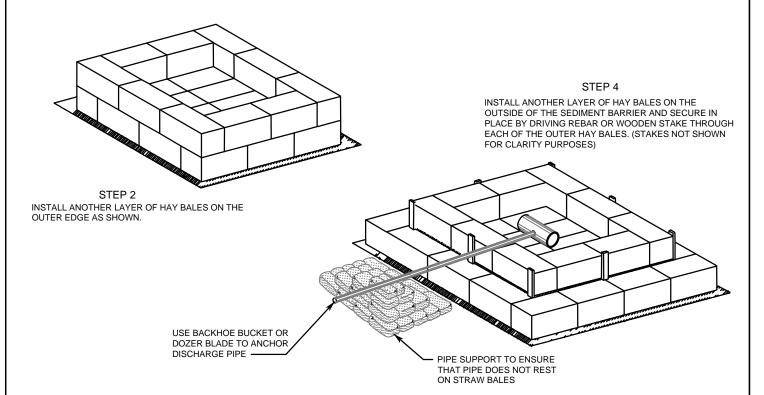

NOTES:

WHERE POSSIBLE STRUCTURE SHALL BE PLACED ON A LEVEL, WELL VEGETATED UPLAND SITE SUCH THAT WATER WILL FLOW AWAY FROM STRUCTURE AND ANY WORK AREAS.

CONTRACTOR SHALL PROPERLY REMOVE AND PROPERLY DISPOSE OF DEWATERING STRUCTURE IMMEDIATELY UPON COMPLETION OF DEWATERING OPERATIONS. UNDER NO CIRCUMSTANCES SHALL USED DEWATERING STRUCTURES BE LEFT IN PLACE FOR A PERIOD OF TIME GREATER THAN 48 HOURS AFTER DEWATERING OPERATIONS ARE COMPLETE.

STRUCTURE SHOULD BE POSITIONED SUCH THAT WATER WILL NOT FLOW INTO ANY WETLANDS OR WATERBODIES.

